



## **ELECTRICAL TROUBLESHOOTING**

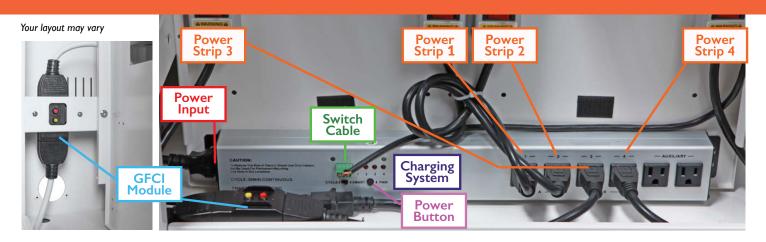

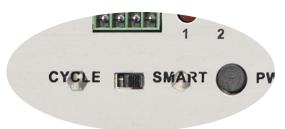

**IMPORTANT:** The electrical system in your cart is designed to handle a **MAXIMUM of 14 Amps.** If the charging system is malfunctioning, switch to "Cycle" using the Mode Selection Switch (Left) and verify the load limit has not been exceeded.

# **External LED Button is Flashing**

- 1. Overload Protection Mode has been activated.
- 2. Unplug cart and verify devices and external accessories don't exceed 14 Amps.
- 3. Plug cart back in and resume charging.

#### Step 1: Testing the GFCI Module

- 1. With your cart plugged in, open the rear panel door.
- 2. Locate the GFCI Module on either the bottom left or inside the left panel.
- 3. Press down on the Yellow Button (Test).
- 4. Then press the Red Button (Reset).
- 5. Allow 5 seconds for the Charging System to reset.
- 6. If resetting the GFCI Module did not correct the issue, go to Step 2.

### Step 2: Testing the Power Cord

- 1. Unplug your cart and remove cords from both ends of the GFCI Module.
- 2. Plug the main Power Cord into the Power Input port located on the left side of the Charging System.
- 3. Plug the cart back into a wall outlet and press the internal Power Button labeled PWR on the Charging System.
- 4. If the system does not power on, verify that your Power Cord is not damaged by plugging in a PC monitor style IEC Power Cord.

# CAUTION: To Reduce The Risk of Electric Shock Use Only Ind Not Be Used For Permanent Mounting, Use Only In Dry Locations. CYCLE:30MIN CONTINUOUS SMART:AUTO SENSING

# **Step 3: Testing the Power Strips**

- 1. Open the rear panel door and locate the 4 vertically mounted Power Strips.
- 2. Verify each switch is in the "RESET" position, not the "OFF" position.
- 3. Using an extension cord, test each Power Strip by unplugging each cord from the charging system and plugging them into the extension cord.
- 4. If one or more Power Strips no longer works, replace as needed.





Part # 1320399




# **ELECTRICAL TROUBLESHOOTING**

## **Step 4: Testing the External Power Button**


1. With your cart plugged in, open the rear panel door and press the internal Power Button labeled PWR on the charging system.

- 2. If your cart powers on, unplug the Switch Cable from the Charging System.
- 3. Using a small flat head screwdriver, ensure all individual wires are secure.
- 4. Plug the Switch Cable back into the Charging System then press the External Power Button on the side of your cart.
- 5. If the External Power Button does not light up or power on, replace it.

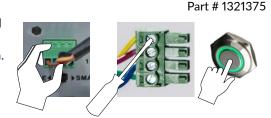

# Step 5: Determining your Model Number

- 1. Find the model name and serial number sticker. This sticker may be on the side or back.
- 2. Determine which Charging System is installed by opening the back door / panel.

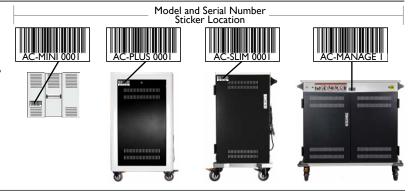


# Step 6: Testing the Charging System

#### 15 Minute Timer

Part # 1323198



- 1. Remove all plugs from the outlets of your Charging System.
- 2. Power on your system by pressing the internal Power Button.
- 3. Verify the "A" LED illuminates for 15 minutes.
- 4. Then verify the "B" red LED illuminates for 15 minutes.
- 5. If either does not, replace the **Charging System** by removing the 4 phillips screws holding the brackets to the frame.

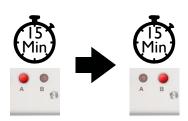

For all models

Part # 1323855

#### **Intelli-Sense Smart Charging System**



- 1. Remove <u>ALL</u> plugs from the outlets of your Charging System.
- 2. Power on your system by pressing the internal Power Button.
- 3. Verify the "1" and "2" LEDs illuminate for about 8 seconds.
- 4. Verify the "3" and "4" LEDs illuminate for about 8 seconds.
- 5. Finally, verify all four LEDs illuminate for about 8 seconds.
- 6. If this sequence does not occur, replace the Charging System by removing the 4 phillips screws holding the brackets to the frame.

